

Cordless Rechargeable Carpet Sweeper

Model 7310

Carpet Wizard

Instruction Manual

Please read these instructions
fully before using this
product.



Caution - Important Safeguards

When using an electrical appliance, basic safety precautions should always be observed, including the following

Read all instructions before using your sweeper

WARNING:

to reduce the risk of fire, electrical shock, or injury:

- Do not charge this unit outdoors.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use the main charger with damaged cord or plug. Do not use sweeper if it has been dropped, damaged, left outdoors, or dropped in water.
- Do not abuse the charger cord. Never carry the charger or base by the cable or pull to disconnect from an outlet; instead grasp the charger and pull to disconnect.
- Keep charger cord away from heated surfaces.
- This product includes rechargeable nickel cadmium batteries. Do not incinerate batteries or expose high temperatures, as they may explode.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any openings blocked; keep free of dust, lint, hair and anything that may reduce the flow of litter.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids such as gasoline or use in areas where they may be present.
- Do not attempt to change accessories while unit is running.
- Use extra care when cleaning on stairs.
- Do not use charger with an extension cord. Plug charger directly into an electrical outlet. Use charger only in a standard (120V ~60Hz) electrical outlet.
- Always use the charger supplied with this unit. Failure to conform will damage the appliance.

IMPORTANT


Electrical requirements:

Please ensure that the voltage shown on the rating plate on the charger unit corresponds with your household electricity supply which must be AC (Alternating Current).



Notice: Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

Main Components

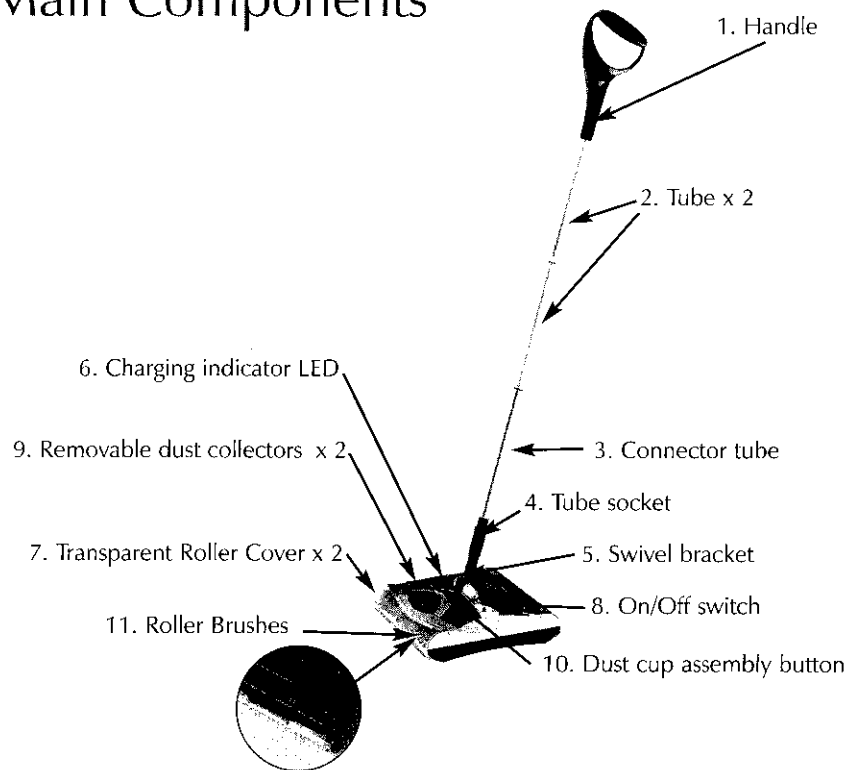


Description: This is a dual roller rechargeable sweeper for cleaning on carpets or hard floor surfaces.

Features

- Power On/Off switch.
- The handle has a swivel action which can move the brush head 180 degrees in the vertical and horizontal positions.
- The Roller Brushes have hard wearing spring Nylon bristles.
- The Sweeper has two Roller Brushes, two motors and two dust collectors for fast and efficient cleaning.
- Two transparent roller covers are provided to view the brushes revolving and litter being swept into the dust collectors.
- The red colour LED is an indication the battery is charging.
- The sweeper head is balanced to work in all directions.

Assembly

Unpack and remove the whole unit from packaging. Insert the tubes and handle as indicated below. Slight pressure is required to push each tube firmly into position.

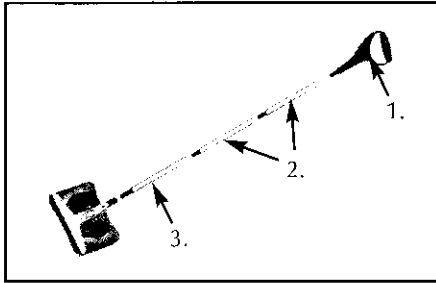


How to operate your Cordless Sweeper

Your cordless rechargeable sweeper operates when the batteries are fully charged. Before using, please ensure that the cordless sweeper is initially charged for 16-20 hours.

Important: Do not attempt to use this product until the unit is fully charged as this will damage the future performance of the batteries.

Once the product is fully charged – Push the On/Off switch (8) to operate the unit. When you wish to switch off the sweeper simply press the On/Off switch again. Only a light pressure is required.

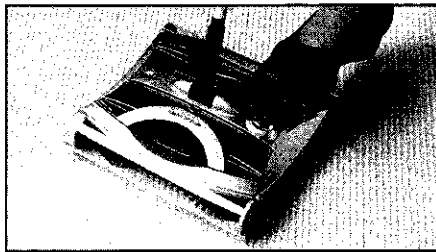

Charging the Cordless Sweeper

Connect the charger plug to the charging socket on the side face of the sweeper. Plug the charging adaptor into the wall socket.

WARNING: Only use the charger provided with the equipment.

Model No. PD35B0900200

Output: 9v DC 200mA 32w

This cordless sweeper is powered by Ni-Cad batteries. Before first use, they must be charged for a minimum of 16 hours. Please note the indicator light does not change when the appliance is fully charged.


Once the batteries are fully charged, the sweeper will run for up to 1 hour before recharging is required.

- When recharging, make sure the unit is in the Off position.
- To recharge, repeat step as above, charging times will vary depending upon the amount of usage between charging cycles.
- The charging light indicator on the top of the main unit will illuminate to indicate that the sweeper is properly charging.
- If the sweeper batteries are fully discharged and the red light fails to illuminate when the charger is connected, press the sweeper On/Off switch once to confirm that the sweeper is in the Off position.

IMPORTANT: To maintain peak performance of your cordless sweeper batteries, it is recommended that unit be fully discharged, then completely recharged at least once a month

Belt Replacement

Should either belt become worn or broken they can be replaced by first moving the transparent roller covers – these simply clip off with a little pressure applied to the bottom edges to ease them clear. The belt covers can be removed by loosening their holding screws. The roller bar can then be carefully lifted in order to remove the old belt and replace with a new one. Clear any debris which may have collected and then carefully replace the roller bar into position and replace belt cover and the transparent roller cover. See diagram below: -

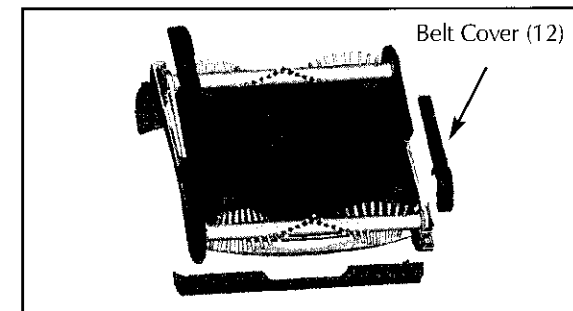

Cleaning Instructions

IMPORTANT: To maintain peak performance of your cordless sweeper follow the instructions below on a regular basis.

- Remove the roller brushes as per belt replacement procedure above. Ensure any hairs or fibres wrapped around the bearing housings at each end of the roller are removed. It may also be necessary to remove any compressed debris collected in the ends of the roller.
- Re-assemble taking care to locate the bearing housing at the belt end of the roller with the spring arms horizontal between the location slots.
- Replace belt covers and transparent roller covers.
- **WARNING:** Failure to follow cleaning procedures will impair the function of the rollers and cause stress on the motors causing premature failure of the appliance which is not covered by warranty.

To empty the Dust Collectors


Lift the Dust Collector clear of the sweeper body, hold it over a waste bin and press the release button (10) which will release the back flap on the bin and allow the debris to fall out into the waste bin.

To close the flap just lift up until it clips into place.

Clear any debris from the dust pan housing.

Replace the dust collector into the sweeper.

Do not allow the dust collectors to get over full as it will affect the efficiency of your sweeper.

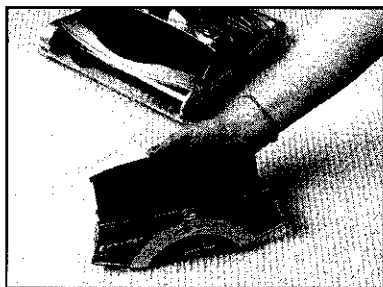

Care and Maintenance

Once per month clean the product with a dry cloth, and remove hair and fibre build up from the brush rollers and bearings.

Do not use abrasive materials to clean the product or immerse it in water.

Do not pick up liquids or use on wet floors.

Do not use on concrete, tarmac or similar rough surfaces.

Do not pick up pieces of string or fabrics with the unit.

Do not clean rug tassels or frayed carpets with the unit.

Do not allow the unit to run if one of the brushes has stopped rotating due to debris. This could damage the belt or motor.

Do not use if the brushes become stiff to rotate by hand – clean the appliance thoroughly (see cleaning instructions)

Warranty and Service Information

Ocean Sales warrants this electrical appliance to be free of any manufacturer's defect for a period of two years from the date of original purchase.

This warranty in no way prejudices your rights under common law and is offered as an addition to consumers' statutory rights.

This warranty does not cover normal wear and tear, damage caused by overloading, negligence, accident or improper use. Any change or modification made by the purchaser or user to the appliance will invalidate the warranty, as would any attempted repair.

The warranty applies only when the appliance has been operated in accordance with the instructions and connected to an electricity supply, which matches that shown on the base of the appliance.

The warranty will be rendered invalid if the product is resold. The product must be used solely for domestic purposes.